

Invacare® IDC



en **Remote**
User Manual

This manual **MUST** be given to the user of the product.
BEFORE using this product, read this manual and save for future reference.



Yes, you can.®

© 2015 Invacare Corporation

All rights reserved. Republication, duplication or modification in whole or in part is prohibited without prior written permission from Invacare. Trademarks are identified by ™ and ®. All trademarks are owned by or licensed to Invacare Corporation or its subsidiaries unless otherwise noted.

Contents

1 General	4
1.1 About this manual	4
1.2 Intended use	4
1.3 General information	4
2 Components	5
2.1 Top side	5
2.2 Bottom side	5
3 Setup	6
3.1 Mounting IDC (up to January 2016)	6
3.2 Mounting the KLICKfix adapter (since January 2016)	7
3.3 Installing/Removing the IDC (since January 2016)	7
3.4 Connecting the attendant control to the electronics	8
3.5 Removing the attendant control from the wheelchair (up to January 2016)	9
4 Usage	10
4.1 Starting up the attendant control	10
4.2 Adjusting the speed	10
4.3 Controlling the wheelchair with the IDC	10
4.3.1 How to steer the wheelchair	11
4.3.2 How the wheelchair reacts to handle movements	11
4.4 Information on the "Emergency Stop" function	12

I General

I.1 About this manual

This document is a supplement to the power wheelchair's documentation.

The product itself does not bear a CE mark but is part of a product that complies with Directive 93/42/EEC concerning medical devices. It is therefore covered by the power wheelchair's CE marking. See the power wheelchair's documentation for more information.

I.2 Intended use

The IDC can be used to assign control of the power wheelchair from the driver to an attendant. The IDC is not suitable for the wheelchair driver himself. The attendant walks behind or to the side of the wheelchair, and can intuitively determine speed and direction of movement by pressing a handle with minimum force. Adjustments can also be made to the wheelchair using dedicated programming. Once he activates the IDC, the attendant takes over complete responsibility for the wheelchair and its driver. The IDC can only be used in connection with the master remote on the wheelchair, and is restricted to ACS/ACS2 electronics.

I.3 General information

Can the IDC be used for wheelchairs with direct steering?

The IDC can be used irrespective of whether the wheelchair has direct or indirect steering.

Which electronic systems is the attendant control compatible with?


The IDC is only compatible with wheelchairs which use the ACS/ACS2 system since special connections need to be available. The IDC attendant control only functions in connection with a master remote. Contact your Invacare® dealer for more information.

Switching between IDC and master remote


The IDC is switched on and off using the master remote on the wheelchair. The wheelchair driver cannot switch back to his own mode by himself using the master remote. This can only be done by the attendant using the IDC.

2 Components

2.1 Top side

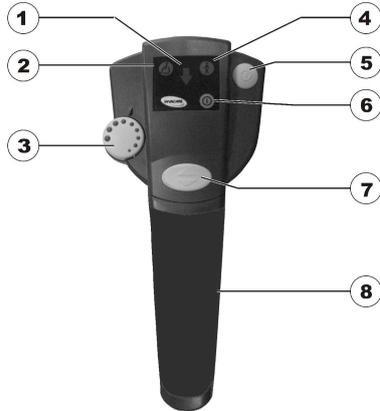

2.2 Bottom side

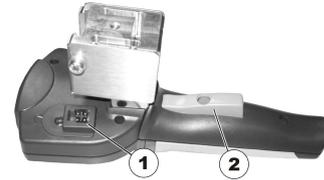

- 1 Connection socket for bus cable
- 2 Drive button for driving/emergency stop

- 1 “Reverse activated” LED
- 2 “Wheelchair driver in control” LED
- 3 Speed potentiometer
- 4 “Attendant in control” LED
- 5 “Driver/attendant” switchover button
- 6 “ON/OFF” LED
- 7 “Forwards or reverse” push button
- 8 Steering handle

3 Setup

3.1 Mounting IDC (up to January 2016)

Mounting the bracket



Tools:

- For standard bracket: open-ended spanner 8 mm
- For adjustable bracket: Allen key 4 mm and open-ended spanner 8 mm

The IDC is fitted to the wheelchair using a bracket on the push handle. There are two variations, one is adjustable and one is fixed (standard). The bracket clamp is fixed with four bolts (1).



1. Fix the bracket onto the wheelchair push handle as shown in the figure above.
2. Position bolts (1). Use nuts for the adjustable bracket.
3. Tighten the bolts, prevent nuts from turning if necessary.

Mounting the IDC




CAUTION!

Risk of unintended movement

If the clamping lever is fitted too tightly or replaced by hardware not approved by Invacare, the IDC might get a drive signal and could start running by itself when in attendant profile.

- Tighten the clamping lever hand-tight only (max. 6 Nm).
- Only use the clamping lever provided by Invacare for fixing the IDC.
- Test the mobility device before use.

1.

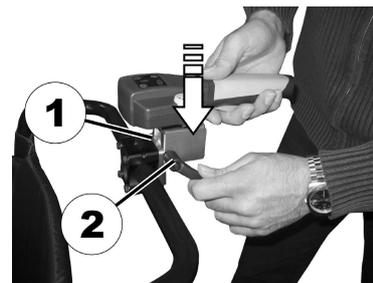

1. Attach the attendant control to the mounting plate (1).
2. Tighten the clamping lever (2).


3.2 Mounting the KLICKfix adapter (since January 2016)

Standard mounting



Tools:

- Phillips screwdriver

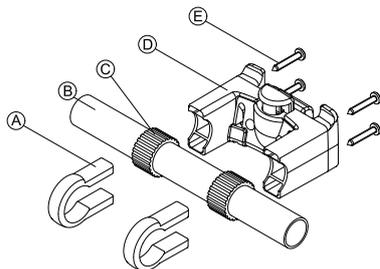


1. Position the tightening clamps **A** on the wheelchair push handle **B**.
2. Make sure, the rubber band **C** is between the tightening clamps and the push handle.
3. Fit the KLICKfix adapter **D** onto the tightening clamps.
4. Tighten the screws **E**.

Mounting on the Ultra Low Maxx seating system



Tools:

- 3/16" Allen key
- Phillips screwdriver

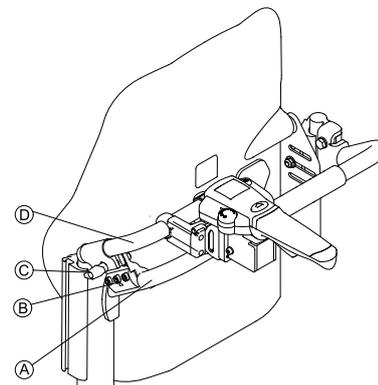

1. Fix the retaining clamp **B** on the wheelchair push handle **A**.
2. Slide the adapter tube **D** through the retaining clamp.
3. Tighten the wing bolt **C**.
4. Mount the KLICKfix adapter on the adapter tube, refer to chapter Standard mounting.

3.3 Installing/Removing the IDC (since January 2016)




IMPORTANT!

Risk of damage

If an IDC is installed it will increase the footprint of the wheelchair. When driving without attendant, the IDC could get damaged, for example, when driving backwards against an obstacle.


- Remove or fold in the IDC before driving without attendant.

Installing the IDC

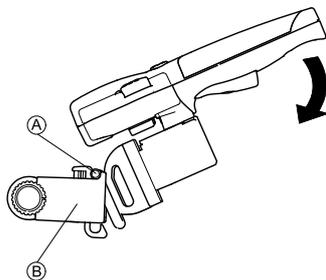


1. Position the adapter bracket (A) onto the KLIICKfix adapter (B).
2. Push the IDC downwards until it locks automatically.

Removing the IDC

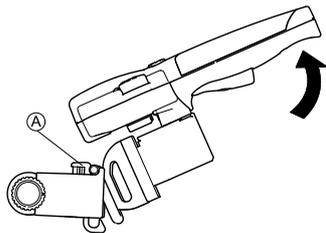

1. Press the red KLIICKfix button (A) and hold it.
2. Lift the IDC upwards to remove it from the adapter.

Folding in the IDC

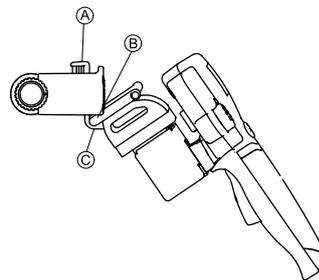

1. Remove the IDC from the adapter.
2. Press the red KLIICKfix button (A) and hold it.
3. Position the lower edge of the adapter bracket (B) inside the lower fixation of the adapter (C).
4. Release the KLIICKfix button.

3.4 Connecting the attendant control to the electronics



The intuitive attendant control takes over control of the wheelchair and may only be used by an attendant. It is imperative that the wheelchair driver himself is not allowed to operate the attendant control.



Fitting should only be carried out by an Invacare® approved dealer. When fitting, please ensure that the bus cable is routed and fixed correctly so that damage to the bus cable is avoided.


1. Switch the wheelchair electronics off at the master remote.
2. Connect one end of the bus cable to the IDC, the other end to a free bus socket on the wheelchair.

 In case there is no spare bus socket on the wheelchair's control system, a splitter / 4-way bus socket can be ordered from your Invacare® dealer.

3. The attendant control is now connected to the drive.

3.5 Removing the attendant control from the wheelchair (up to January 2016)


1. Switch the wheelchair off, and dismantle the individual parts in accordance with the instructions in the wheelchair's user manual.
2. Only ever pull the control unit plug out of its socket by holding the housing, not the cable!
- 3.

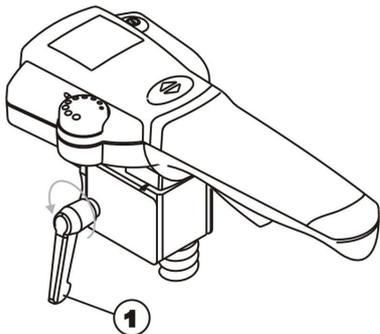

Loosen the clamping lever (1) (rotates several times!) and pull the control unit out of the wheelchair bracket.

4 Usage

4.1 Starting up the attendant control

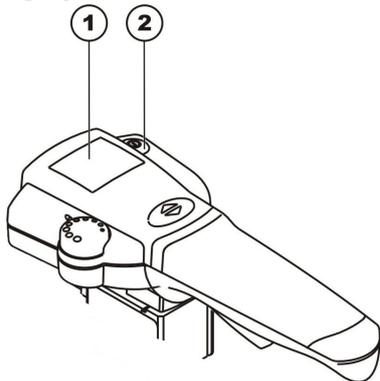

1. Cycle power on the master remote. Wait until the start-up routine is completed. This is a regular procedure when the wheelchair is powered on.
2. The "ON/OFF" and "Wheelchair driver in control" diodes on the attendant control display (1) will illuminate.
3. Press the switchover button (2) on the attendant control. This activates the attendant control, and the following operating displays are shown:
 - In the wheelchair driver's remote display: battery symbol (accumulator capacity display) and under this the letter "A" = Attendant.
 - In the attendant control display (1): the "Attendant in control" diode on the right illuminates.



See the wheelchair's user manual for more information about the battery charging status display.

4.2 Adjusting the speed




The maximum speed of the wheelchair can be set by the user to match his personal requirements and the surrounding conditions. The current maximum speed set is displayed on the wheelchair speed display and can also be preset there. You can carry out further fine adjustments to the maximum speed on the IDC using the speed potentiometer (1). In addition, the speed increases the more the drive button is pressed.

4.3 Controlling the wheelchair with the IDC

1. Switch on wheelchair via the master remote. The displays on the remote illuminate. Preset the speed if necessary.
2. Use the switchover button on the IDC to select attendant control. The wheelchair is ready to drive.
3. Adjust the driving speed (speed potentiometer — see section 4.2 Adjusting the speed, page 10)


4. Press the drive button to start the wheelchair moving.
5. Adjust the maximum speed to match your walking pace.

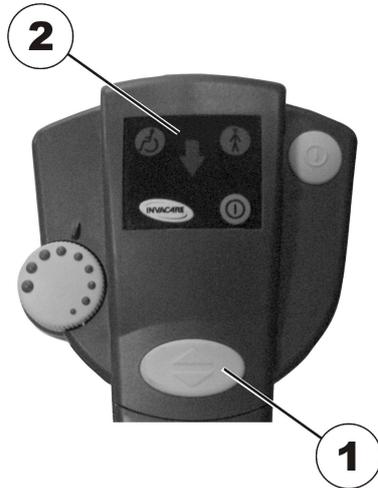

You can set whether the wheelchair should travel forwards or backwards by pressing the switchover button for forwards or reverse gear (1). If reverse gear has been selected, the arrow (2) illuminates.

4.3.1 How to steer the wheelchair


The electronic system contained in the handle (1) registers the movement made by the attendant's hand. Slight pressure on the handle to the left or right is translated into a drive command for the drive wheels so that bends can be travelled without the need for much force.

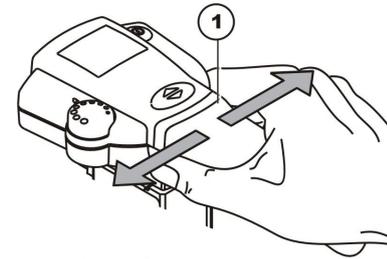


When reversing, make sure you know whether the wheelchair has direct or indirect steering so that you know in which direction you have to steer, and then in which direction the wheelchair will actually travel. You should initially get used to the IDC attendant control in stages so that no hazards are posed for the wheelchair driver or others.

4.3.2 How the wheelchair reacts to handle movements

Steering takes place by pressing the handle to the sides. Whether you are travelling forwards or backwards, you must touch the left-hand side of the handle to make the wheelchair turn to the left. If you touch the right-hand side of the handle, the wheelchair will turn to the right.

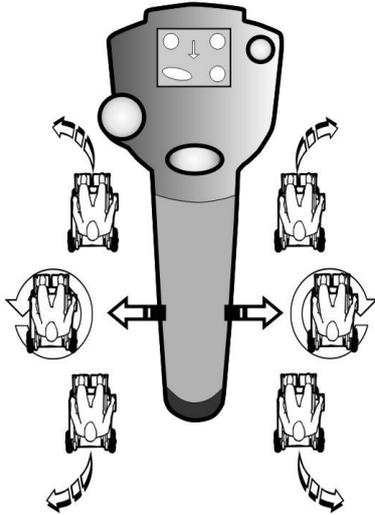


Travel direction

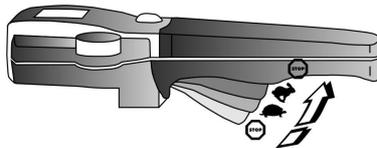

The more the button is pressed, the faster the wheelchair will drive.

i To brake quickly, simply let go of the handle. The wheelchair brakes. If you press the drive button with full force, the wheelchair also carries out an "Emergency Stop".

4.4 Information on the "Emergency Stop" function

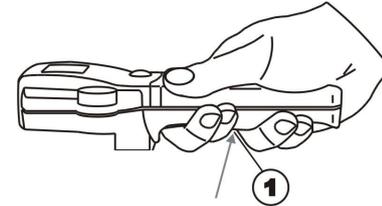

If the wheelchair needs to be stopped immediately due to a hazard situation, push the drive button (I) firmly as far as possible. This causes an immediate forced drive switch-off. Once you release the drive button (I) you can start to drive the wheelchair again immediately.

Notes

Notes

Invacare Sales Companies

Australia:

Invacare Australia PTY. Ltd.
1 Lenton Place, North Rocks NSW
2151
Australia
Phone: 1800 460 460
Fax: 1800 814 367
orders@invacare.com.au
www.invacare.com.au

United Kingdom:

Invacare Limited
Pencoed Technology Park, Pencoed
Bridgend CF35 5AQ
Tel: (44) (0) 1656 776 222
Fax: (44) (0) 1656 776 220
uk@invacare.com
www.invacare.co.uk

Canada:

Invacare Canada LP
570 Matheson Blvd E. Unit 8
Mississauga Ontario
L4Z 4G4, Canada
Phone: (905) 890 8300
Fax: (905) 501 4336

Eastern Europe & Middle East:

Invacare GmbH, EDO
Kleiststraße 49
D-32457 Porta Westfalica
Tel: (49) (0)57 31 754 540
Fax: (49) (0)57 31 754 541
edo@invacare.com
www.invacare.eu.com

Ireland:

Invacare Ireland Ltd,
Unit 5 Seatown Business Campus
Seatown Road, Swords, County Dublin
Tel : (353) 1 810 7084
Fax: (353) 1 810 7085
ireland@invacare.com
www.invacare.ie

New Zealand:

Invacare New Zealand Ltd
4 Westfield Place, Mt Wellington 1060
New Zealand
Phone: 0800 468 222
Fax: 0800 807 788
sales@invacare.co.nz
www.invacare.co.nz

1521481-C 2015-12-15



Making Life's Experiences Possible™



Yes, you can.®